


## USA & CANADIAN DS INTERIOR LIGHT SCHEMATIC (1970-1972)


19 - Right door switch  
 29 - Left door switch  
 40 - Interior light switch on dash  
 47 - Ignition switch\*\*  
 48 - Right interior light  
 51 - Left interior light  
 100 - Door Buzzer Module

\* If you want to remove the door buzzer and have the interior lights still work, disconnect wires 1 and 2 from the buzzer module and connect them together.

\*\* Only USA ignition switches have the sensor for wire 3

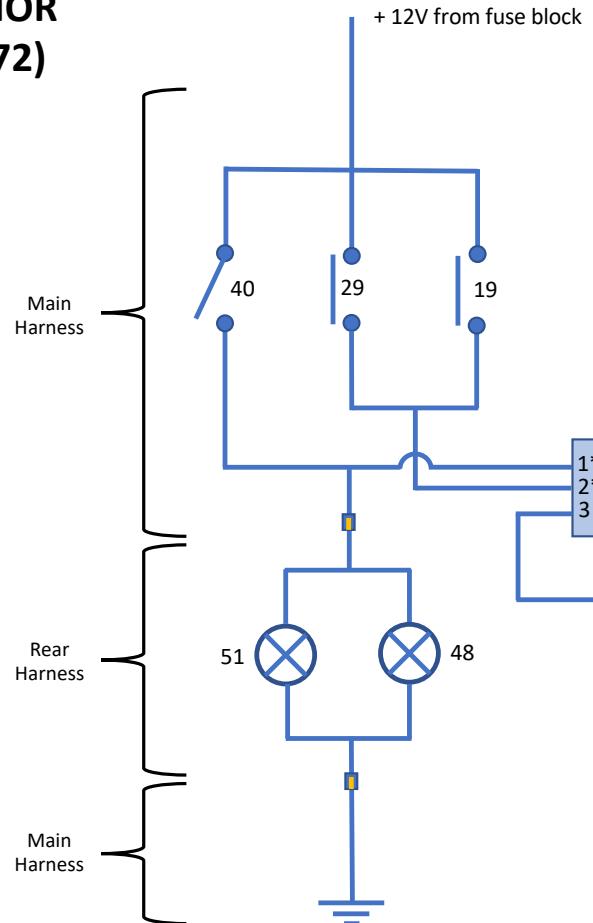

Door buzzer module under dash

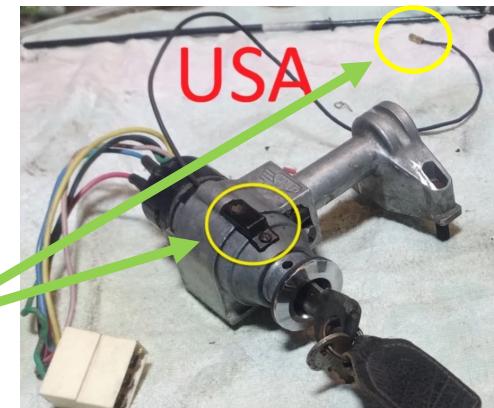

Ignition switch (the circled parts are unique to USA switches)