OWNER'S MANUAL

ALL TRANSISTOR

STEREO FM-AM

RADIO

CUSTOM BUILT

for

SM CITROËN

Push-Button Tuning

OPERATING INSTRUCTIONS

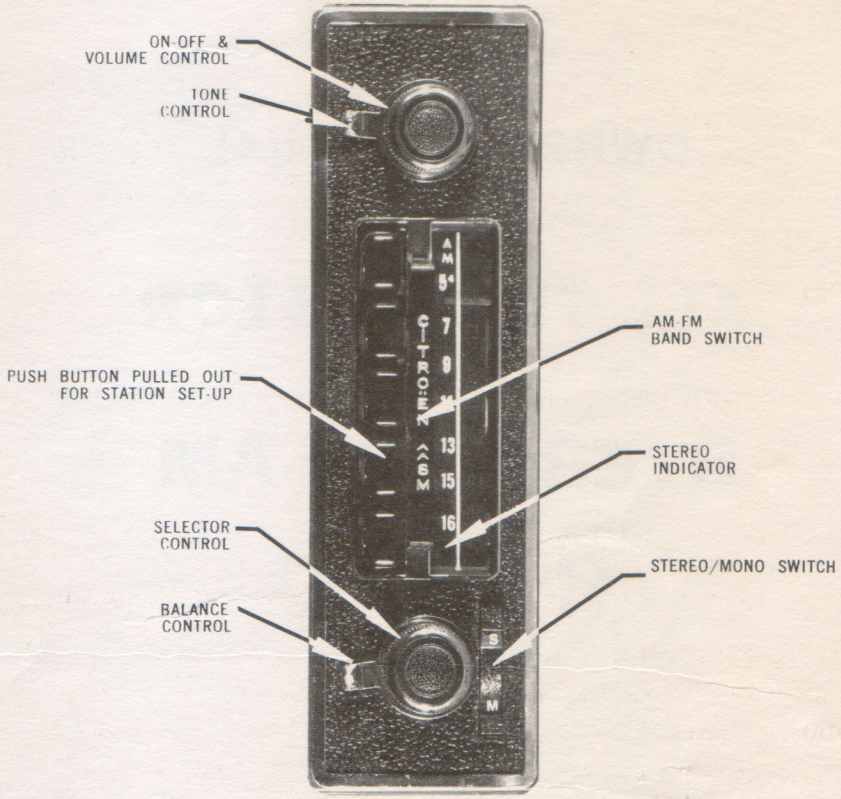

INTRODUCTION. This radio has been designed with multiplex circuitry to bring stereo FM broadcasts into your car to provide an added dimension to your regular FM listening enjoyment.

ON-OFF SWITCH AND VOLUME CONTROL. Turn ON-OFF control clockwise to switch radio on. To increase volume, continue turning ON-OFF control clockwise. To switch radio off, turn ON-OFF control to its extreme counter-clockwise position.

TONE CONTROL. Turn the tone control fully clockwise for voice, to mid-position for music, and fully counter-clockwise for bass.

AM-FM BAND SWITCH. Select desired broadcast band (AM or FM) with BAND switch. For AM reception, push BAND switch to the right so that white jewel is visible. For FM reception, push BAND switch to the left so that red jewel is visible.

BALANCE CONTROL. Turn Balance Control either clockwise or counter-clockwise as required until a balanced sound level between the two speakers is achieved.

STATION SELECTION. Push the BAND switch to desired broadcast band (AM or FM). Then tune in desired station either by turning SELECTOR control or by pressing push-button preset to desired station. (To set push-buttons, see paragraph entitled "SETTING PUSH-BUTTONS.)

STEREO INDICATOR. The indicator light will go on automatically when selected FM station is broadcasting programs in stereo.

ANTENNA HEIGHT. For best FM reception, adjust antenna height to approximately 30 inches. The 30 inch antenna height will also provide good AM reception in most areas.

STEREO/MONO SWITCH. There is provided a Stereo/Monaural switch which should be used in fringe areas where the stereo signal is difficult to receive. The range of the signal (in mono) can be increased.

SETTING PUSH-BUTTONS. Each push-button can be set to one station only—either an AM or an FM station. This provides a total of five stations that can be selected by push-button operation. These five stations can be five AM stations, five FM stations or any combination of five AM and FM stations—for example, four AM and one FM, or two AM and three FM. Stations can be set up in any order; however, for convenience in remembering, stations should be set up in the order of their frequencies. Set push-buttons as follows:

1. Turn radio on and allow to operate for a few minutes.

2. Extend antenna height to 30 inches.

3. Position BAND switch to either AM or FM, depending upon which broadcast band the desired station is on.

4. Pull out push-buttons. (See Figure 1)

5. Accurately tune in a station with the manual SELECTOR control.

6. Lock one push-button to that station by pushing button in firmly.

7. Repeat Steps 3 to 6 for each of remaining four push-buttons.